

Error Codes

00300	Controller Phase Line Failure
00400	Controller Bus Overcurrent
00500	Power Tube Failure
00600	Tilting Error
00700	Throttle Error
00800	Low Voltage Protection
00900	Over Voltage
00A00	Motor Hall Sensor Failure
00B00	Motor Phase Line Failure
00C00	Motor Overheat
00D00	Motor Temperature Sensor Failure
00E00	Controller Overheat
00F00	Controller Temperature Sensor Failure
01000	Current Sensor Failure
02000	Motor Out of Phase
03000	Motor Stalling
04000	Communication Error